

---

**AEXX-388-X SERIES**

**MULTI-ZONE**

**RS232 TIME ZONE CLOCK SYSTEM**

**(Includes AEXX-354 versions)**

---



## **DESCRIPTION**

AEXX-388-X Series Multi-Zone Displays are available with 1", 2.3", 4", 8", or 12" high digits, visible from 5 feet to 500 feet away. Depending on the digit size, up to 10 zones are possible in a single enclosure. The maximum length of a single enclosure is 120 inches. For systems requiring larger displays such as the 8-inch and 12-inch displays, multiple enclosures may be required. Some systems may have one time zone per enclosure. These models will have a different suffix (354), but the operation is the same. PC's or other devices can control the AEXX-388-X Series Displays by communicating via RS232 using a control program such as 24TZ15.

This manual covers all AE Series Multi-Zone Displays from two to six digits, including two-sided versions with the RS232 Time Zone Clock System (388) or RS232 Serial Input (354), both can be set up for fixed addresses or fixed offset operation. It will use the term "the AE DEVICE", in some cases to cover all versions of displays.

The model numbers of the AEXX-388-X Series are derived from the digit size and the number of digits in the display, followed by the 388 suffix and the number of zones included. For example the AE44-388-2 is a Four-Digit, Four-Inch, Two-Zone Display, and the AE26-388-4 is a 2.3-Inch, Six-Digit, Four-Zone Display. For two-sided versions, the model number would have /2. For example: AE44/2-388-2 would be the model number for a Double-Sided, Four-Inch, Four-Digit, Two-Zone Display. Each AE Display can be configured in a number of ways. Some will have different enclosures. For more information on your specific model number refer to the drawings included at the back of this manual.

A demo disk is available, which contains several sample programs including 24TZ15 for fixed address. 24TZ15 is a program designed specifically for setting the time on AE Series Time Zone Clock Systems. Additional, sample programs and detailed programming information are included, and will aid the user if they wish to create their own control program. See the addendum in the back of the manual for more information about the 24TZ15 software. Other programs such as 24TIME1 can be used for fixed offset applications.

Name Rails, which are used for the labeling of time zones, are available for the AE Series Multi-Zone Displays. The Name Rails are built the same length of the clock and increase the height of the clock by 2.5 inches. Consult the factory for more information on Name Rails on your AE Display.

For multiple display systems the Master/Driver Option (348) can be added. This option allows you to connect up to 40 remote displays to the AEXX-388-X Series Display for displaying the same information in many locations.

**AEXX-388-X SERIES, MULTI-ZONE, RS232 TIME ZONE CLOCK SYSTEM**  
**REV 09/18/00**

**SPECIFICATIONS**

Digits: 1, 2.3, 4, 8 and 12 Inch High, Seven Segment Digits are available. For additional digit specifications, see the drawings at the back of this manual for your specific model.

Function: Receives control and data information. Modes are provided for sending ASCII characters and numbers, for setting time of day in 12 or 24-hour format, and for controlling Up and Down counting elapsed timers.

Time Zone operation - two different formats:

- 1) Fixed addresses on the rotary switch for specific time zones.
- 2) Fixed positive or negative offsets from local time are set on the rotary switch for specific time zones.

Power: 120 VAC – The power required varies with the size and number of digits. Optional power includes 50 HZ, 12 VAC, 12 to 15 VDC and 220 VAC.

Battery backup: Self-charging, Ni-Cad.

Signal required: 2 wire RS232 (receive only)  
2400 baud, no parity, 8 data bits, 1 stop bit.

Enclosure: Black anodized aluminum with .118" thick red acrylic lens. The back panel is .125" thick black, ABS plastic. The size varies with the size and number of digits. See the drawings at the back of this manual.

One or more 1210-0101 mounting brackets are provided for wall mounting to a single or double gang box. Optional enclosures are available.

Wiring: Clearly labeled, pigtail lead wires (#18 AWG) are provided. Optional terminal blocks, power cords, and connectors are available.

Program information and drawings are provided at the back of this manual for more detail.

Options: There are numerous options available Some include: (/2) Two Sided Version, (348) Master/Driver Output, (376) Relay Output, and (PC8) Add 8 FT. Power Cord. When options are ordered, supplemental information is provided with addenda and additional drawings.

***For all other options refer to the drawings at the back of this manual for additional specifications.***

## **INSTALLATION**

### **SETTING THE DISPLAY ADDRESSES**


Each AEXX-388-X or AEXX-354 display or time zone has its own specific address, so they can be addressed independently by the users' program. A rotary switch is provided on each controller for setting the addresses. Valid addresses are 1 to 15 (1-9, A, B, C, D, E, and F on the rotary switch). Address 0 is an all call address and is not used with time zone applications. To set the addresses, the back panel must be removed to gain access to the controller. See the drawings for more details. Addresses can be specified with the order and set at the factory. If you are writing your own control program, be sure to include the address in the 10-byte message sent by the host device.

### **SETTING FIXED OFFSETS**

In this case, each AEXX-388-X or AEXX-354 display or time zone has its own fixed offset from the time it will be sent. Therefore, they are not addressed independently by the users' program but all sent the same time and offset accordingly. A rotary switch is provided on each controller for setting the offsets. Valid offsets are +/- 1 to 15 (1-9, A, B, C, D, E, and F on the rotary switch). For negative offsets the S2 input must be tied to ground. The time may only be sent to the AE Devices via address 0 or 15 (F) for this application. To set the offsets, the back panel must be removed to gain access to the controller. See the drawings for more details. Offsets (+ or -) can be specified with the order and set at the factory. If you are writing your own control program, be sure to include the address in the 10-byte message sent by the host device.

### **MOUNTING**

The AE Series Displays can be mounted in a variety of ways. Things to consider for mounting include ambient light, viewing area, ambient temperature, dirt or dust. Most models are supplied with one or more 1210-0101 mounting brackets for wall mounting to a single or double gang box. See the detail below. For other mounting options, such as ceiling mounts or double-sided mounts, refer to the specific drawings.

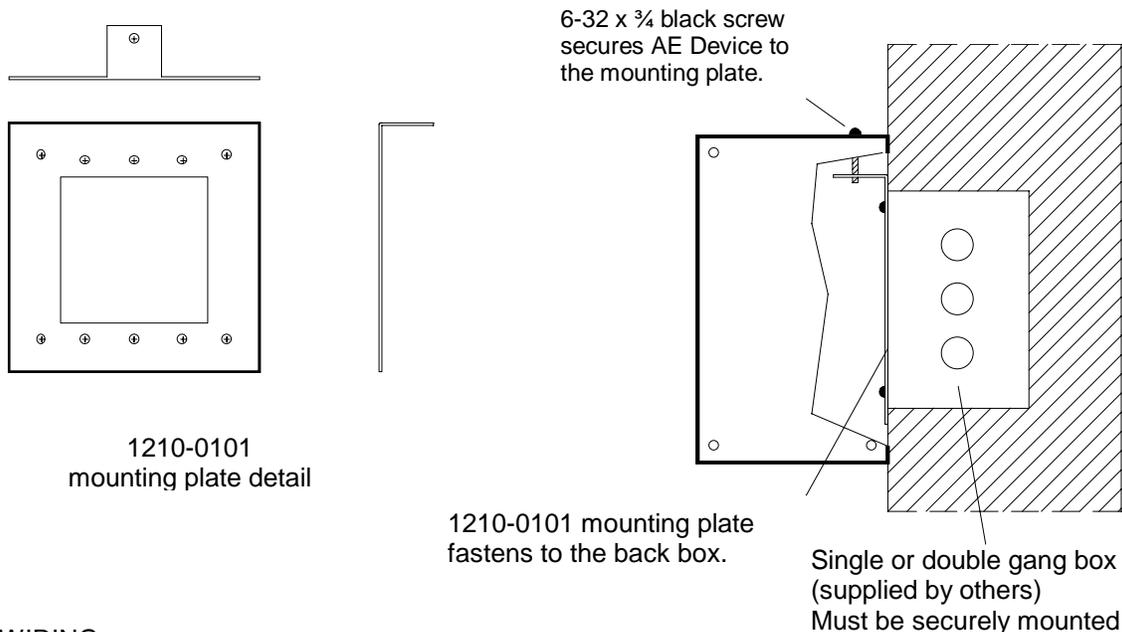


### **WIRING**

**AEXX-388-X SERIES, MULTI-ZONE, RS232 TIME ZONE CLOCK SYSTEM**  
**REV 09/18/00**

There are many wiring configurations for the AEXX-388-X or AEXX-354 Series Displays, depending on the functions used and the options installed.

On most standard units, clearly labeled pigtail leads wires are provided for the power at the back panel of the unit. Additional pigtail leads are provided for the RS232 Input signal. For other options, refer to the addendum sheets provided for that option. Also, see the wiring diagrams for more detail at the back of this manual.

**RS232 WIRING DIAGRAM**

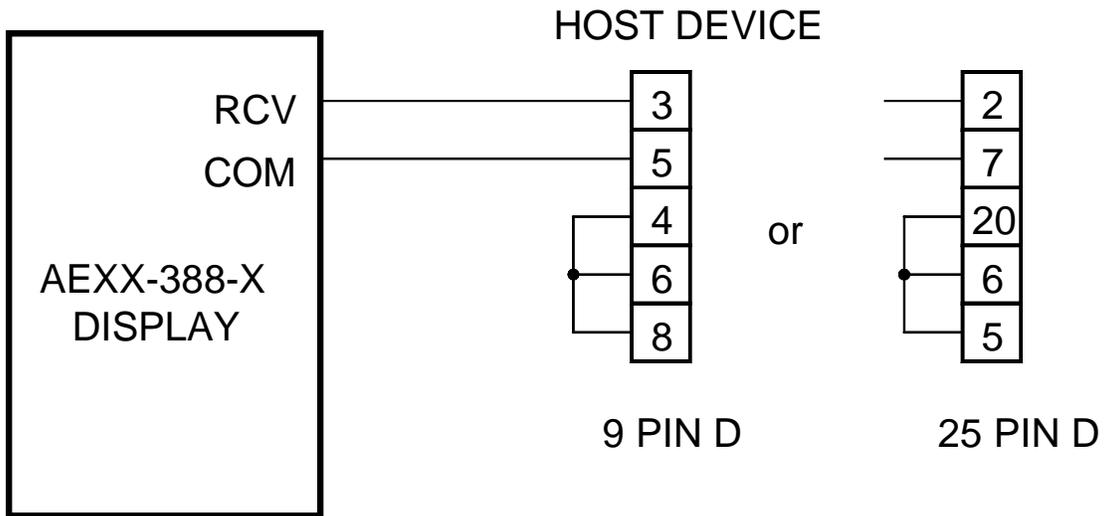

**2400 BAUD, NO PARITY, 8 DATA BITS, 1 STOP**

Connect the RS232 output from the host computer to the wires labeled "RCV" and "COM". The connector at the host computer must be wired and have the jumpers as shown above.

SEE THE FOLLOWING SECTION ON THE RS232 OPTION AND THE DEMO DISK PROVIDED FOR MORE DETAIL.

**AEXX-388-X SERIES, MULTI-ZONE, RS232 TIME ZONE CLOCK SYSTEM  
REV 09/18/00**

**RS232 TIME ZONE OPTION**

**DESCRIPTION**

The AE Series RS232 Time Zone option allows AE Series devices to communicate with host computers, process computers (PLC'S), industrial instruments, and other equipment with RS232 output ports. With the 10-byte instruction format multiple units can be connected in parallel and addressed individually or as a group. Up to 15 unique addresses plus an all call address (0) are available. The 10-byte instruction also provides mode selection, sends 6 characters, and sets display attributes. The host computer or controller can have complete control of all the digits and functions of the AE device with simple or complex programs that can output data via an RS232 serial port.

AE Series devices are available in many configurations with digit sizes of 1", 2", 4", 8", and 12" high. Systems can be assembled using AE devices of various digit sizes and numbers of digits and other AE options to meet a variety of time zone applications.

Applications for World Time Zone Clocks include, but are not limited to:

Trading Rooms

Boardrooms and lobbies of Multi-National companies to show time in the various cities where they have branches, representation or conduct business.

International hotels

Airports

Military installations

**AEXX-388-X SERIES, MULTI-ZONE, RS232 TIME ZONE CLOCK SYSTEM**  
**REV 09/18/00**

**OPERATION**

Before applying power, be sure all wiring is completed. Apply power to the unit. The displays will rotate during the power on self-test and then it will flash a version, until data is received. If a charged battery is installed, the self-test will be bypassed.

If you are using the 24TZ15 control program provided on the Demo disk, see the addendum at the back of this manual for further instructions. If you will be writing your own control program, you will need to send the following control information to the AEXX-388-X system.

A 10-byte instruction is required to communicate with the AE Series device. The first byte, byte 0, is the preamble. It establishes communications with the AE device. The second byte, byte 1, is the address byte that is used for addressing up to 15 different addresses and an all call address. Byte 2 is the mode byte. Up to 256 modes are possible providing complete control of all the 7 segment characters and functions of the AE Series products. Bytes 3 through 8 are associated with the six, 7-segment displays of the AE Series device. Byte 9 is the miscellaneous digit, which provides attributes such as colons, AM/PM indicators, flash, etc.

**BYTE 0:**           **START CHARACTER** - An 11H is required to establish communications.

**BYTE 1:**           **ADDRESS BYTE** - Range is from 0 to 15. Used for addressing individual devices. Address 0 is an ALL CALL address.

Set the address using the Mode Switch (SW1) located on the CPU board. Switch position 0 is address 0 and switch position F is address 15 for displays with fixed addresses.

Switch positions 0 – 15 (F) are (+/-) offsets of 0 – 15 (F) as determined by the configuration for fixed offset displays. Time may only be sent via address 0 or 15 (F) for displays with fixed offsets.

See the drawing at the back of this manual for more detail.

**BYTE 2:**           **MODE BYTE** - Range is from 0 to 255. This byte provides complete control of all AE Series devices with the RS232 option installed. The modes are:

**MODE 0** - ASCII character mode. The AE device will display the AE ASCII characters sent in bytes 3 through 8. See the AE ASCII character set at the back of this manual.

**MODE 1** - Number mode. The AE device will display the numbers 0 to 9 sent in bytes 3 through 8.

**MODE 2** - Graphic character mode. The AE device will display the AE graphic characters sent in bytes 3 through 8. See the AE graphic character set at the back of this manual.

**MODE 3** - 12 Hour Time/timer mode. Bytes 3 through 8 are set as the time, and time keeping begins.

**MODE 4** - 24 Hour Time/timer mode. Bytes 3 through 8 are set as the time, and time keeping begins.

**AEXX-388-X SERIES, MULTI-ZONE, RS232 TIME ZONE CLOCK SYSTEM**  
**REV 09/18/00**

MODE 5 - Count down timer mode. Bytes 3 through 8 are set as the preset value to count down from.

MODE 6 - Displays the software version installed in the AE device.

MODE 7 – Presets a Day Counter. Bytes 3 through 8 preset the number of days to start from. S3 must be tied low and a 1N914 diode must be installed in the PD8 position on the circuit board assembly. Time is set using Mode 4. The count is incremented by one everyday at Midnight.

MODES 8 - 255 are for future use.

BYTES 3 - 8: SIX CHARACTER BYTES - AE devices can have up to 6 digits. The six characters received are for displaying on these six digits. These characters will depend on the mode byte, byte 2, that precedes them. They provide the words for messages, the digits for setting time and variable, and even 7-segment graphic characters.

BYTE 9: MISCELLANEOUS DIGIT BYTE - This byte provides colons, AM/PM indicators, and other attributes such as display flashing.

BIT 0 - Turns on the AM/PM indicator.

BIT 1 - Turns on the colons. Colons are automatically turned on in the time/timer mode, i.e. byte 2 = 3.

BIT 2 - If equal to 1, stops count down timer. If equal to 0, starts count down timer.

BIT 3 - If equal to 0, count down timer begins from preset value entered in bytes 3 through 8. If equal to 1, count down timer begins from where it previously was stopped.

BIT 7 - Flash display.

**TECHNICAL SUPPORT**

For any questions concerning installation and operation of this product, contact our factory at:

**PHONE (800) 444-7161**  
**OR**  
**FAX (318) 797-4864**

**SERVICE POLICY**

It is recommended that all service for this product be done by the factory or by a factory authorized service representative. Applied Technical Systems will provide ongoing service support in and out of warranty. Send your repairs to:

**APPLIED TECHNICAL SYSTEMS**  
**815 KING PLACE**  
**SHREVEPORT, LA 71115**

**APPLIED TECHNICAL SYSTEMS**  
**WARRANTY POLICY**

ATS warrants its products to be free of defects in material and workmanship for a period of 24 months from the date of purchase. ATS will repair or replace any product returned to its authorized factory service center within the warranty period so long as there is no evidence that the product has been abused, misused, damaged by lightning, overloads of any kind or water, or altered in any way.

Products returned for warranty must be returned with freight prepaid. ATS will pay normal freight charges to return the product to the customer. Special premium freight requested by the customer will be charged to the customer.

ATS disclaims any warranties expressed or implied, including merchantability and/or fitness for a particular purpose. In no event shall ATS be held liable for incidental or consequential damages.